## Manual

## Reset

- Turn the e-mark on.
- Remove the cover and use a thin object (such as a paper clip) to press the button located in the small hole on the right side of the e-mark (picture on the right) for few seconds. Wait for acoustic signals to be finished.
- The e-mark is reset to the factory settings and restarts. This lasts several seconds.



• Make an imprint on which you can find SSID and password of your e-mark.



• Use this access data to reconnect to your e-mark.